

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
106	Additional heating		√	√	√	√	√	
106REMOD ELAGE	Petrol engine	CDY BOSCH MA3.1	√	√	√			
		CDZ BOSCH MA3.1	√	√	√			
		HDY BOSCH MA3.1	√	√	√			
		HDZ BOSCH MA3.1	√	√	√			
		HFX BOSCH M7.4.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		KFX BOSCH MP7.3	√	√	√	√	√	1.Initialization Adaption
		KFX MM1AP	√	√	√	√		
		KFW SAGEM S2000	√	√	√	√	√	1.Marching 2.Initialization Adaption
		NFX MM1AP	√	√	√	√	√	1.Initialization Adaption 2.Injection ECU initialisation
	Additional heating		√	√	√	√	√	
107	Petrol engine	CFA BOSCH ME7.9.5		√	√	√	√	
	Diesel engine	8HT SIEMENS SID805	√	√	√	√	√	1.Configuration 2.Pairing
	AT	controlled manual gearbox(MMT)		√	√	√		
	Active and passive safety	ABS BOSCH 8.0 C1			√	√	√	
		ESP BOSCH 8.0 C1			√	√	√	
	Airbag ECU			√	√	√	√	
	Coded anti-star				√	√	√	
Power steering			√	√	√	√		

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Built-in systems interface(BSI)		√	√	√			1. Resetting to zero of the service mileage
	Petrol engine	KFU MM6LPC	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		KFV J34P	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		NFU BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
	Diesel engine	8HX SID 806 DV4	√	√	√	√	√	1.Configuration
		8HZ SID 806 DV4	√	√	√	√	√	1.Configuration
		9HT BOSCH EDC16C3	√	√	√	√	√	1.Configuration 2.Particulate filter regeneration 3.Replacement particle emission filter 4.Replacement of the particle emission filter and work on the additive adding circuit

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
1007 CAN		9HZ BOSCH EDC16C3	√	√	√	√	√	1.Configuration 2.Particulate filter regeneration 3.Replacement particle emission filter 4.Replacement of the particle emission filter and work on the additive adding circuit
	ABS	ABS MK70.1	√	√	√	√	√	1.Configuration 2.Bleeding
		ESP MK60-O	√	√	√	√	√	1.Configuration 2.Bleeding 3.Steering wheel angle sensor cal
	Airbag ECU	Airbag ECU	√	√	√	√		1.Configuration 2.lock and unlock
	Vehicle protection/Management of accesses	Alarm	√	√	√	√	√	1.Configuration
		Rain/brightness sensor	√	√	√			
	Driving assistance/Comfort	Parking assistance	√	√	√	√	√	1.Configuration
		Air conditioning	√	√	√	√	√	1.Configuration
		Under inflation detection	√	√	√	√		
		Power steering	√	√	√	√		1.Configuration

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Inform the driver/Audio/Communication	Multi-function display						
		Steering wheel switching module	√	√	√	√	√	
		Radio	√	√	√	√	√	1.Configuration
		Hands Free Kit	√	√	√	√	√	1.Configuration
		CD player	√	√	√		√	
		Instrument panel	√	√	√	√	√	1.Configuration
		Telematics	√	√	√	√	√	1.Configuration
	Built-in systems interface(BSI)		√	√	√			1. Resetting to zero of the service mileage
	Petrol engine	NFU ME744	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		KFV J34P	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		KFV S2000PM2	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		KFU MM6LP	√	√	√	√		
		N6A BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		N6B BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialization Adaption

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
1007 VAN		NFU BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
	Diesel engine	8HZ SIEMENS SID 804	√	√	√	√	√	1.Configuration
		8HX SIEMENS SID804	√	√	√	√	√	1.Configuration
	ABS	ABS MK70	√	√	√	√	√	1.Configuration 2.Bleeding
		ESP MK60	√	√	√	√	√	1.Configuration 2.Bleeding 3.Steering wheel angle sensor cal
	A/T	Controlled manual gearbox(BVMP)	√	√	√	√	√	1.Configuration 2.Counters 3.Learning 4.Stalling
	Air bag	Airbag ECU	√	√	√	√		1.Configuration
	Visibility/Lighting/Signalling	Rain/brightness sensor	√	√	√			
		Steering wheel switching module	√	√	√	√		
	Driving assistance/Comfort	Parking assistance	√	√	√	√	√	
		Air conditioning	√	√	√	√	√	1.Configuration
		Power steering	√	√	√	√		
	Inform the driver/Audio/Communication	Telematics RT3	√	√	√	√	√	1.Configuration
		Multi-function display EMF	√	√	√	√		
		CD player	√	√	√	√	√	1.Configuration

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Driver/Radio/Communication	Instrument panel	√	√	√	√	√	1.Configuration
		Radio	√	√	√	√	√	1.Configuration
	BSI		√	√	√	√	√	1.Initialization Adaption 2.key program
		NFU BOSCH ME744	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		RFR MM48P	√	√	√	√	√	1.Initialization Adaption
		N6A BOSCH ME745	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Programming/Pairing
		NFU BOSCH ME745	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Programming/Pairing
		N6A BOSCH ME744 FLEX FUEL	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		N6A BOSCH ME744	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		NFU Or N6A Or N6B ME749 BIO FIEX	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Petrol engine	KFW ME749	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content
		KFW ME749 BIOFLEX	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content
		RFN MM48P	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		KFX BOSCH MP7.3	√	√	√	√	√	1.Initialization Adaption
		KFX MM1AP	√	√	√	√		
		KFU MM6LP	√	√	√	√		1.Initialization Adaption
		HFZ MM1AP	√	√	√	√	√	1.Initialization Adaption 2.Injection ECU initialisation
		HFY MM1AP	√	√	√	√	√	1.Initialization Adaption 2.Injection ECU initialisation
		KFW SAGEM S2000	√	√	√	√	√	1.Marchting 2.Initialization Adaption
	K6D SAGEM S2000	√	√	√	√	√	1.Marchting 2.Initialization Adaption	

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
206		K6C MM1AP	√	√	√	√	√	1.Initialization Adaption 2.Injection ECU initialisation
		HFX MM4.8P	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		RFK MM6LP	√	√	√	√	√	1.Configuration
		RFN MM6LP	√	√	√	√		1.Initialization Adaption
		7LZ MM5NP	√	√	√			
		KFW BOSCH ME7.4.4	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		NFZ BOSCH MP7.2	√	√	√	√	√	
		KFW J34P	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		K6D J34P	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		NFU J35	√	√	√	√	√	1.Configuration
		8HX/8HZ BOSCH EDC16C3 EURO3	√	√	√	√	√	1.Configuration 2.Injection classification
		8HZ BOSCH EDC16C3 EURO4	√	√	√	√		1.Injection classification
		9HY BOSCH EDC16C3 EURO4	√	√	√	√	√	1.Injection classification

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Diesel engine	9HY BOSCH EDC16C3	√	√	√	√	√	1.Configuration 2.Injection classification 3.Forced regeneration vehicle stationary 4.Forced regeneration vehicle moving
		9HZ BOSCH EDC16C3	√	√	√	√	√	1.Configuration 2.Injection classification 3.Forced regeneration vehicle stationary 4.Forced regeneration vehicle moving
		9HX EDC16C3	√	√	√	√	√	1.Configuration 2.Injection classification 3.Forced regeneration vehicle stationary 4.Forced regeneration vehicle moving
		9HT BOSCH EDC16C3	√	√	√	√	√	1.Configuration 2.Injection classification 3.Forced regeneration vehicle stationary 4.Forced regeneration vehicle moving
		WJY LUCAS DCN2	√	√	√	√	√	1.Configuration

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function
		WJZ LUCAS DCN2	√	√	√	√		
		RHY BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Configuration of mileage completed by parts 3.particle filter
	ABS	ABS MK70	√	√	√	√	√	1.Configuration 2.Bleeding
		Anti-lock brakes TEVES (ABS BOSCH 5.3)	√	√	√	√	√	1.air bleed
	A/T	AL4 automatic gearbox	√	√	√	√	√	1.Marchting 2.Initialization Adaption 3.Accelebration pedal 4.Oil wear counter
		ZF 4HP20 AT	√	√	√	√		
		Diesel fuel additive control unit	√	√	√	√	√	1.Configuration
		Electric pump unit(power steering)	√	√	√	√		
	IP	Instrument panel	√	√	√	√	√	1.Marchting
	A/C	Air conditioning	√	√	√	√	√	1.Configuration
		Alarm	√	√	√	√	√	1.Configuration
	Visibility/Lighting	Driving school	√			√	√	
		Rain/brightness sensor	√	√	√			
		Display/Telematics	√	√	√	√	√	1.Marchting

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions						
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function	
	Driver information	on-board navigation system	√	√	√	√			
		Instrument panel	√	√	√	√	√	1.Configuration	
		Radio	√	√	√	√	√	1.Configuration	
		CD Player	√	√	√	√	√		
		Switch unit under steering wheel(COM 2000)	√	√	√	√			
		Air bag and seat belt	√	√	√			1.Marchting	
		Left side airbag	√	√	√			1.Marchting	
		Right side airbag	√	√	√			1.Marchting	
		Built-in systems interface(BSI)		√	√	√			1. Resetting to zero of the service mileage
			HFX MM48P	√	√	√	√	√	1.Configuration 2.Initialization Adaption
HFY MM1AP			√	√	√	√	√	1.Initialization Adaption 2.Injection ECU initialisation	
HFZ MM1AP			√	√	√	√	√	1.Initialization Adaption 2.Injection ECU initialisation	
K6C MM1AP			√	√	√	√	√	1.Initialization Adaption 2.Injection ECU initialisation	
K6D SAGEM S2000			√	√	√	√			
KFU MM6LP			√	√	√	√			

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Petrol engine	KFW BOSCH ME7.4.4	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		KFW J34P	√	√	√	√	√	1.Configuration
		KFW SAGEM S2000	√	√	√	√		
		KFX BOSCH MP7.3	√	√	√	√	√	1.Initialization Adaption
		KFX MM1AP	√	√	√	√		
		N6A BOSCH ME7.4.4	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		N6A BOSCH ME7.4.4FLEX FUEL	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		N6A BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Programming/Pairing
		NFU BOSCH ME7.4.4	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		NFU BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Programming/Pairing

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
206 MUX		NFU Or N6A Or N6B ME749 BIO FIEX	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		KFW ME749	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content
		KFW ME749 BIOFLEX	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content
		NFU J35	√	√	√	√	√	1.Configuration
		K6D J34P	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		NFZ BOSCH MP7.2	√	√	√	√	√	
		RFK MM6LP	√	√	√	√	√	1.Configuration
		RFN MM6LP	√	√	√	√		
		RFN MM48P	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		RFR MM48P	√	√	√	√	√	1.Initialization Adaption
		8HX/8HZ BOSCH EDC16C3 EURO3	√	√	√	√	√	1.Configuration 2.Injection classification

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Diesel engine	8HZ BOSCH EDC16C3 EURO4	√	√	√	√		1.Injection classification
		9HY BOSCH EDC16C3 EURO4	√	√	√	√		1.Injection classification
		9HT BOSCH EDC16C3	√	√	√	√	√	1.Configuration 2.Injection classification 3.Forced regeneration vehicle stationary 4.Forced regeneration vehicle moving
		9HY BOSCH EDC16C3	√	√	√	√	√	1.Configuration 2.Injection classification 3.Forced regeneration vehicle stationary 4.Forced regeneration vehicle moving
		9HZ BOSCH EDC16C3	√	√	√	√	√	1.Configuration 2.Injection classification 3.Forced regeneration vehicle stationary 4.Forced regeneration vehicle moving

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		9HX EDC16C3	√	√	√	√	√	1.Configuration 2.Injection classification 3.Forced regeneration vehicle stationary 4.Forced regeneration vehicle moving
		RHY BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Configuration of mileage completed by parts 3.particle filter
		WJY LUCAS DCN2	√	√	√	√	√	1.Configuration
		Diesel fuel additive control unit	√	√	√	√	√	1.Configuration
	AT	AL4 automatic gearbox	√	√	√	√		
	ABS	ABS MK70	√	√	√	√	√	1.Configuration 2.Bleeding
		Anti-lock brakes MK70	√	√	√	√	√	1.Configuration 3.Bleeding
		Anti-lock brakes TEVES	√	√	√	√		
		ESP MK60	√	√	√	√	√	1.Configuration 2.Bleeding 3.Steering wheel angle sensor cal

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Air bags	Air bags	√	√	√	√	√	1.Configuration 2.lock and unlock
	A/C	Air conditioning	√	√	√	√	√	1.Configuration
		Alarm	√	√	√	√	√	1.Configuration
	Visibility/Lighting	Driving school	√			√	√	
		Rain/brightness sensor	√	√	√			
	Driver information/Communication	Display/Telematics/AMF	√	√	√	√	√	1.Configuration
		Display/Telematics/RT3	√	√	√	√	√	1.Configuration
		Radio	√	√	√	√	√	1.Configuration
		CD player	√	√	√	√	√	
		Instrument panel	√	√	√	√	√	1.Configuration
	Electric pump unit(power steering)	√	√	√	√			
	Built-in systems interface(BSI)		√	√	√			1. Resetting to zero of the service mileage
		KFW J34P	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		TU5JP4 ME745	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
206 +	Petrol engine	NFU Or N6A ME749	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content
		N6A ME749 BIO FLEX	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content
		KFW ME749	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content
		KFW ME749 BIO FLEX	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content
	Diesel engine	RHY EDC15C2	√	√	√	√	√	1.Configuration 2.Configuration of mileage completed by parts 3.particle filter

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		8HZ BOSCH EDC16C3 EURO4	√	√	√	√		1.Injection classification
		9HY BOSCH EDC16C3 EURO4	√	√	√	√		1.Injection classification
	AT	AL4 automatic gearbox	√	√	√	√	√	1.Configuration 2.Initialization Adaption 3. Oil wear counter
	Active safety	ABS MK70	√	√	√	√	√	1.Configuration 2.Bleeding
		ESP MK60	√	√	√	√	√	1.Configuration 2.Bleeding 3.Steering wheel angle sensor cal 4.Initialization Adaption
		Air-bag	√			√		1.Configuration 2.lock and unlock
	A/C	Air conditioning	√	√	√	√	√	1.Configuration
		Alarm	√	√	√	√	√	1.Configuration
		Rain/brightness sensor	√	√	√			
	Inform the driver/Audio/Communication	Display/Telematics	√	√	√	√	√	1.Configuration
		Steering wheel switching module	√	√	√	√		
		Radio	√	√	√	√	√	1.Configuration
		CD player	√	√	√	√	√	
		Instrument panel	√	√	√	√	√	1.Configuration

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Built-in systems interface(BSI)		√	√	√			1. Resetting to zero of the service mileage
	Petrol engine	N6A BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Programming/Pairing
		N6B BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Programming/Pairing
		NFU BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Programming/Pairing
		KFU MM6LPC	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		5FW MEV17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		5FX MED17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		5FY MED17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		5FR MED17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		8FS MEV17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		5FS MEV17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		8FR MEV17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		8FP MEV17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		MEV17.4 EVO	√	√	√	√	√	1.Configuration
		KFV J34P	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		KFT V34.1	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		EP3C 8FP MEV17.4.2	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		EP3CM 8FP MEV17.4.2	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		EP3C 8FR MEV17.4.2	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		EP6C 5FS MEV17.4.2	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		8HZ BOSCH EDC16C3 EURO4	√	√	√	√		1.Injection classification
		9HX BOSCH EDC16C3	√	√	√	√	√	1.Configuration 2.Injection classification

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		9HY BOSCH EDC16C3 EURO4 (CAN)	√	√	√	√	√	1.Configuration 2.Injection classification
		9HY BOSCH EDC16C3 EURO4 (KWP)	√	√	√			1.Configuration 2.Injection classification
		9HZ BOSCH EDC16C3	√	√	√	√	√	1.Configuration 2.Particulate filter regeneration 3.Replacement particle emission filter 4.Replacement of the particle emission filter and work on the additive adding circuit
		9HV BOSCH EDC16C3	√	√	√	√	√	1.Configuration 2.Particulate filter regeneration 3.Replacement particle emission filter 4.Replacement of the particle emission filter and work on the additive adding circuit
		9HY BOSCH EDC16C3	√	√	√	√	√	1.Configuration 2.Injection classification

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
207CAN	Diesel engine	9HT BOSCH EDC16C3	√	√	√	√	√	1.Configuration 2.Injection classification
		9HP BOSCH EDC17C10	√	√	√	√	√	1.Configuration 2. Particle emission filter forced regeneration 3. Programming of the total quantity of additive injected into the particulate emission filter
		8HR BOSCH EDC17C10	√	√	√	√	√	1.Configuration 2. Particle emission filter forced regeneration 3. Programming of the total quantity of additive injected into the particulate emission filter
		9HL HDI SID807	√	√	√	√	√	1.Configuration 2. Particle emission filter forced regeneration 3. Programming of the total quantity of additive injected into the particulate emission filter

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		9HR HDI SID807	√	√	√	√	√	1.Configuration 2. Particle emission filter forced regeneration 3. Programming of the total quantity of additive injected into the particulate emission filter
		9HP EDC17C10_BR2	√	√	√	√	√	1.Configuration 2. Particle emission filter forced regeneration 3. Programming of the total quantity of additive injected into the particulate emission filter
		Multiplexed additive adding pump ECU	√	√	√			
	AT ECU	AL4 automatic gearbox	√	√	√	√	√	1.Configuration 2.Initialization Adapatation
		colltrolled manual gearbox(BVMP)	√	√	√	√	√	1.Configuration 2.Counters 3.Learning 4.Stalling
		ABS MK70.1	√	√	√	√	√	1.Configuration 2.Bleeding

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	ABS	ESP MK60-O	√	√	√	√	√	1.Configuration 2.Bleeding 3.Steering wheel angle sensor cal
	Air bag	Airbag ECU	√	√	√	√		1.Configuration 2.lock and unlock
	Driving assistance/Comfort	Parking assistance	√	√	√	√	√	1.Configuration
		Air conditioning	√	√	√	√	√	1.Configuration
		Under inflation detection	√	√	√	√		
		Power steering	√	√	√	√		
	Inform the driver/Audio/Communication	Muti-function display	√	√	√			
		Radio	√	√	√	√	√	1.Configuration
		CD player	√	√	√		√	
		Instrument panel	√	√	√	√	√	1.Configuration
		Hands Free Kit	√	√	√	√	√	1.Configuration
		Steering wheel switching module	√	√	√			
		Telamatics	√	√	√	√	√	1.Configuration
		Battery charge status unit	√	√	√	√		1.Configuration
		Warning light showing seat belt not fastened	√					
	Vehicle protection/Management of accesses	Alarm	√	√	√			
		BSM	√	√	√	√	√	

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Visibility/Lighting/Signalling	BSR	√	√	√	√	√	
		TNB	√				√	
		Rain/Brightness sensor	√	√	√			
		Driving school module	√	√			√	
		Static AFS	√	√	√			
	Built-in systems interface(BSI)		√	√	√			1. Resetting to zero of the service mileage
	Petrol engine	KFW J34P	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		HFX J34P	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		HFV V34.3	√	√	√	√		
		KFT V34.3	√	√	√	√		
		TU5JP4 ME745	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		NFU Or N6A ME749	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
207 VAN		N6A ME749 BIO FLEX	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content
		KFW ME749	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content
		KFW ME749 BIO FLEX	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content
	Diesel engine	WJY DCN2	√	√	√	√		
		RHY EDC15C2	√	√	√	√	√	1.Configuration 2.Configuration of mileage completed by parts 3.particle filter
		8HZ BOSCH EDC16C3 EURO4	√	√	√	√		1.Injection classification
		9HY BOSCH EDC16C3 EUR04	√	√	√	√		1.Injection classification

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		8HR EDC17C10_BR2	√	√	√	√		
	AT	AL4 automatic gearbox	√	√	√	√	√	1.Configuration 2.Initialization Adaption 3. Oil wear counter
	A/C	Air conditioning	√	√	√	√	√	1.Configuration
	Inform the driver/Audio/Communication	Display/Telematics/AMF	√	√	√	√	√	1.Configuration
		Display/Telematics/RT3	√	√	√	√	√	1.Configuration
		Steering wheel switching module	√	√	√	√		
		Radio	√	√	√	√	√	1.Configuration
		CD player	√	√	√	√	√	
		Instrument panel	√	√	√	√	√	1.Configuration
		Alarm	√	√	√	√	√	1.Configuration
	Active and passive safety	ABS MK70	√	√	√	√	√	1.Configuration 2.Bleeding
		ESP MK60	√	√	√	√	√	1.Configuration 2.Bleeding 3.Steering wheel angle sensor cal
		Air bags	√	√	√	√		1.Configuration 2.lock and unlock
		Rain/brightness sensor	√	√	√			
	Built-in systems interface(BSI)		√	√	√			1. Resetting to zero of the service mileage

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Petrol engine	NFU Or N6A ME749	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content
		N6A ME749 BIO FLEX	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content
		KFW ME749	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content
		KFW ME749 BIO FLEX	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content
		KFW J34P	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
207i		HFX J34P	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		N6B Or N6A Or NFU ME745	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		HFV V34.3	√	√	√	√		
		KFT V34.3	√	√	√	√		
	Diesel engine	WJY DCN2	√	√	√	√		
		RHY EDC15C2	√	√	√	√	√	1.Configuration 2.Configuration of mileage completed by parts 3.particle filter
		8HZ BOSCH EDC16C3 EURO4	√	√	√	√		1.Injection classification
		9HY BOSCH EDC16C3 EURO4	√	√	√	√		1.Injection classification
		8HR EDC17C10_BR2	√	√	√	√		
		AT	AL4 AT8 automatic gearbox	√	√	√	√	
	Driving assistance/Comfort	Heating/ventilation	√	√	√	√		
		Display/Telematics	√	√	√	√		
		Steering wheel switching module	√	√	√	√		

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Inform the driver/Audio/Communication	Radio	√	√	√	√		
		CD changer	√	√	√	√		
		Instrument panel	√	√	√	√		
		Stolen vehicle location control unit	√	√	√	√		
	Vehicle protection/Management of accesses	Alarm	√	√	√			
		Active and passive safety	ABS MK70	√	√	√	√	
	ESP MK60		√	√	√	√		
	Air bags		√	√	√			
	Visibility/Lighting/Signalling	Rain/brightness sensor	√	√	√			
		Built-in systems interface(BSI)		√	√	√		
		NFU Or N6A ME749	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content
		N6A ME749 BIO FLEX	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
HOGGAR	Petrol engine	KFW ME749	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content
		KFW ME749 BIO FLEX	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content
		KFW J34P	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		HFX J34P	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		TU5JP4 ME745	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		HFV V34.3	√	√	√	√		
		KFT V34.3	√	√	√	√		
		WJY DCN2	√	√	√	√		

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Diesel engine	RHY EDC15C2	√	√	√	√	√	1.Configuration 2.Configuration of mileage completed by parts 3.particle filter
		8HZ BOSCH EDC16C3 EURO4	√	√	√	√		1.Injection classification
		9HY BOSCH EDC16C3 EURO4	√	√	√	√		1.Injection classification
		8HR EDC17C10_BR2	√	√	√	√		
	AT	AL4 AT8 automatic gearbox	√	√	√	√		
	Driving assistance/Comfort	Heating/ventilation	√	√	√	√		
	Inform the driver/Audio/Communication	Display/Telematics	√	√	√	√		
		Steering wheel switching module	√	√	√	√		
		Radio	√	√	√	√		
		CD changer	√	√	√	√		
		Instrument panel	√	√	√	√		
		Stolen vehicle location control unit	√	√	√	√		
	Vehicle protection/Management of accesses	Alarm	√	√	√			
	ABS MK70	√	√	√	√			

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Active and passive safety	ESP MK60	√	√	√	√		
		Air bags	√	√	√			
	Visibility/Lighting/Signalling	Rain/brightness sensor	√	√	√			
	Built-in systems interface(BSI)		√	√	√			1. Resetting to zero of the service mileage
	Petrol engine	5FS MEV17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		5FV MED17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		5FW MEV17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		5FX MED17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		5FV MED 17.4.2 Euro5	√	√	√	√	√	1.Configuration 2.Initialization Adaption
	9HZ EDC16C3	√	√	√	√	√	1.Configuration 2.Particulate filter regeneration 3.Replacement particle emission filter 4.Replacement of the particle emission filter and work on the additive adding circuit	

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
3008		9HL HDI SID807	√	√	√	√	√	1.Configuration 2. Particle emission filter forced regeneration 3. Programming of the total quantity of additive injected into the particulate emission filter
		9HR HDI SID807	√	√	√	√	√	1.Configuration 2. Particle emission filter forced regeneration 3. Programming of the total quantity of additive injected into the particulate emission filter
		RHE DCM3.5	√	√	√	√	√	1.Configuration 2. Particle emission filter forced regeneration 3.Replacement particle emission filter 4. Programming of the total quantity of additive injected into the particulate emission filter

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		RHH DCM3.5	√	√	√	√	√	1.Configuration 2. Particle emission filter forced regeneration 3.Replacement particle emission filter 4. Programming of the total quantity of additive injected into the particulate emission filter
	AT ECU	CFC300P gearbox	√	√	√	√	√	
		AM6 Euro5 automatic gearbox	√	√	√	√	√	1.Configuration 2. Oil wear counter
		AT6 Euro5 automatic gearbox	√	√	√	√	√	1.Configuration 2.Oil wear counter
	Vehicle protection/Management of	Alarm	√	√	√	√	√	1.Configuration
		Driver's door control panel	√	√	√	√	√	
	Inform the driver/Audio/Communication	Multifunction display (EMF)	√	√	√	√	√	1.Configuration
		Steering wheel switching module	√	√	√	√	√	
		Radio	√	√	√	√	√	1.Configuration
		Instrument panel	√	√	√	√	√	1.Configuration
		CD player	√	√	√		√	
		Battery charge status unit	√	√	√	√		1.Configuration
		Telematics	√	√	√	√	√	1.Configuration

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function	
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation		
	Driving assistance/Comfort	Air conditioning	√	√	√	√	√	1.Configuration	
		Parking assistance	√	√	√	√	√	1.Configuration	
		Under inflation detection	√	√	√	√			
	Air bag	Airbag ECU	√	√	√	√		1.Locking 2.Unlocking 3. Configuration	
		BSM	√	√	√	√	√		
		BSR	√	√	√	√	√		
		GEP	√	√	√	√	√		
		POMPE_MUX_MGI	√	√	√	√	√		
		POMPE_MUX_TI	√	√	√	√	√		
		FSE	√	√	√	√	√		
		TNB	√				√		
		Visibility/Lighting/Signalling	Rain sensor	√	√	√			
			Headlamp height corrector	√	√	√	√	√	1.Configuration 2.Calibration
306	Petrol engine	HDY BOSCH MA3.1	√	√	√				
		KFX MM1AP	√	√	√	√			
		HDZ BOSCH MA3.1	√	√	√				
		RFS MM1AP	√	√	√	√	√	1.Initialization Adaption 2.Ignition advance setting	
	Air bag	Air bag and seat belt	√	√	√			1.Marchting	
		KFX BOSCH MP7.3	√	√	√	√	√	1.Initialization Adaption	
		NFZ BOSCH MP7.2	√	√	√	√	√		
		KFX MM1AP	√	√	√	√			

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
306REMOD ELAGE	Petrol engine	KFX SAGEM SL96	√	√	√	√	√	1.Initialization Adaption
		LFY BOSCH MP7.3	√	√	√	√	√	1.Initialization Adaption
		LFY SAGEM SL96	√	√	√	√	√	1.Initialization Adaption
		NFT BOSCH M7.4.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		KFW SAGEM S2000	√	√	√	√	√	1.Marchting 2.Initialization Adaption
		K6D SAGEM S2000	√	√	√	√	√	1.Marchting 2.Initialization Adaption
		NFV BOSCH M7.4.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		RFS MM1AP	√	√	√	√	√	1.Initialization Adaption 2.Ignition advance setting
	Diesel engine	WJY LUCAS DCN2	√	√	√	√	√	1.Configuration
		WJZ LUCAS DCN2	√	√	√	√		
		RHY BOSCH EDC15C2	√	√	√	√		
	ABS	ABS BOSCH 5.3	√	√	√	√	√	
	A/T	AL4 Gearbox	√	√	√	√	√	1.Marchting 2.Initialization Adaption 3.Accelebration pedal 4.Oil wear counter
	Air bag	Air bag and seat belt	√	√	√			1.Marchting
	Left Air bag	Left side airbag	√	√	√			1.Marchting
	Right Air bag	Right side airbag	√	√	√			1.Marchting

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	BSI		√	√	√	√	√	1.Marching 2.key program
	Petrol engine	NFU BOSCH ME744	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		KFW SAGEM S2000	√	√	√	√	√	1.Marching 2.Initialization Adaption
		K6D SAGEM S2000	√	√	√	√	√	1.Marching 2.Initialization Adaption
		N6A BOSCH ME7.4.4	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		N6A BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Programming/Pairing
		NFU BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Programming/Pairing
		RFN MM48P(Mechanical throttle housing)	√	√	√	√	√	1..Initialization Adaption
		RFN MM4MP2(Motorised butterfly)	√	√	√	√	√	

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		KFU MM6LP	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		RFK MM6LP	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		RFN MM6LP	√	√	√	√	√	1.Configuration 2.Initialization Adaption
	Diesel engine	RHZ BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service
		RHS BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service
		9HY BOSCH EDC16C3	√	√	√	√		1.Injection classification
		RHY SIEMENS SID 801	√	√	√	√	√	1.Configuration
		RHY BOSCH EDC15C2	√	√	√	√		
		9HZ BOSCH EDC16C3	√	√	√	√	√	1.Injection classification 2.Forced regeneration vehicle stationary 3.Forced regeneration vehicle moving
		9HT BOSCH EDC16C3	√	√	√	√	√	1.Injection classification 2.Forced regeneration vehicle stationary 3.Forced regeneration vehicle moving
		8HZ BOSCH EDC16C3	√	√	√	√	√	1.Configuration 2.Injection classification

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
307 VAN		9HX BOSCH EDC16C3	√	√	√	√	√	1.Injection classification 2.Forced regeneration vehicle stationary 3.Forced regeneration vehicle moving
		9HY BOSCH EDC16C3 EUR04	√	√	√	√	√	1.Injection classification 2.Forced regeneration vehicle stationary 3.Forced regeneration vehicle moving
		RHR SIEMENS SID 803	√	√	√	√	√	1.Configuration 2.After-sales particulate emission filter repair operation
		RHL SIEMENS SID 803	√	√	√	√	√	1.Configuration 2.After-sales particulate emission filter repair operation
	ABS	TEVES MK60 ABS	√	√	√	√		
		ABS BOSCH 8	√	√	√	√	√	1.Configuration 2.Bleeding
		ESP BOSCH 5.7	√	√	√	√	√	1.Configuration 2.Bleeding 3.Steering wheel angle sensor cal

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		ABS BOSCH 5.3	√	√	√	√	√	
		ESP BOSCH 8	√	√	√	√	√	1.Configuration 2.Bleeding 3.Steering wheel angle sensor cal
	A/T	BVA AL4	√	√	√	√	√	1.Marchting 2.Oil wear counter
		ZF 4HP20 AT	√	√	√	√		
	Air bag	SAC CENTRAL	√	√	√	√		
		Air bags(SAC CENT SIEMENS)	√	√	√			1.Configuration
	Driver information	Display/Telematics/AMF	√	√	√	√	√	1.Configuration
		Display/Telematics/RT3	√	√	√	√	√	1.Configuration
		parking assistance	√	√	√	√	√	
		Radio	√	√	√	√	√	1.Configuration
		CD player	√	√	√	√	√	1.Configuration
		Switch unit under steering wheel(COM 2000)	√	√	√	√		
		Instrument panel	√	√	√	√	√	1.Configuration
	Visibility/Lighting	Driving school	√			√	√	
	switch control	Driver's door module	√	√	√	√		
		Passenger door module	√	√	√	√		
		Diesel fuel additive control unit	√	√	√	√	√	1.Marchting

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		Electric pump unit(power steering)	√	√	√	√		
		Alarm	√	√	√	√	√	1.Configuration
	A/C	Air conditioning	√	√	√	√	√	1.Configuration
	Built-in systems interface(BSI)		√	√	√	√		1.keys of programming 2. Resetting to zero of the service mileage
		N6A BOSCH ME745	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Programming/Pairing
		NFU BOSCH ME745	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Programming/Pairing
		RFN MM6LP	√	√	√	√		
		N6B BOSCH_ME745	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Programming/Pairing
		KFU MM6LP	√	√	√	√		
		RFK MM6LP	√	√	√	√	√	1.Configuration
		RFJ MM6LPB	√	√	√	√	√	1.Configuration 2.Autoadaptive 3.Programming / Pairing

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Petrol engine	KFU MM6LPC	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		NFU_Or_N6A_Or_N6B_ME749	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content
		NFU_Or_N6A_ME749_FLEX_FUEL	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content
		MM6KP Bio flex	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the ethanol content
		MM6KP Non Bio Flex	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the ethanol content
	RHY BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Forced PF regeneration	

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		RHZ BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Forced PF regeneration
		9HV BOSCH EDC16C3	√	√	√	√	√	1.Configuration 2.Particulate filter regeneration 3.Replacement particle emission filter 4.Replacement of the particle emission filter and work on the additive adding circuit
		9HX BOSCH EDC16C3	√	√	√	√		1.Configuration 2.Injection classification
		9HY BOSCH EDC16C3 EURO3	√	√	√	√		1.Configuration 2.Injection classification
		9HY BOSCH EDC16C3 EURO4	√	√	√	√	√	1.Configuration 2.Injection classification

PEUGEOT V42.61 Diagnostics List (Note: For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
307 CAN	Diesel engine	9HZ BOSCH EDC16C3	√	√	√			1.Configuration 2.Particulate filter regeneration 3.Replacement particle emission filter 4.Replacement of the particle emission filter and work on the additive adding circuit
		9HT BOSCH EDC16C3	√	√	√	√		1.Configuration 2.Injection classification
		RHR SIEMENS SID 803	√	√	√	√	√	1.Configuration 2.After-sales particulate emission filter repair operation
		RHL SIEMENS SID 803	√	√	√	√	√	1.Configuration 2.After-sales particulate emission filter repair operation

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		RHL DCM3.4	√	√	√	√	√	1.Configuration 2. Particle emission filter forced regeneration 3.Replacement particle emission filter 4. Programming of the total quantity of additive injected into the particulate emission filter
		RHR DCM3.4	√	√	√	√	√	1.Configuration 2. Particle emission filter forced regeneration 3.Replacement particle emission filter 4. Programming of the total quantity of additive injected into the particulate emission filter
	AT ECU	AM6L4 automatic gearbox	√	√	√	√	√	1.Configuration 2. Oil wear counter
		AL4 automatic gearbox	√	√	√	√	√	1.Configuration 2.Initialization Adaption
			ABS8 BOSCH	√	√	√	√	√

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Active and passive safety	ABS 8.1	√	√	√	√	√	1.Configuration 2. Bleeding
		ESP 8.1	√	√	√	√	√	1.Configuration 2. Bleeding
		ESP BOSCH 8	√	√	√	√	√	1.Configuration 2.Bleeding 3.Steering wheel angle sensor cal
		Airbag ECU	√	√	√	√		1.Configuration 2.lock and unlock
	Driving assistance/Comfort	Parking assistance	√	√	√	√	√	1.Configuration
		Air conditioning	√	√	√	√	√	
		Power steering	√	√	√	√		
		Under inflation detection	√	√	√	√		
	Inform the driver/Audio/Communication	Muti-function display	√	√	√	√		
		Radio	√	√	√	√	√	1.Configuration
		CD player	√	√	√		√	
		Hands Free Kit	√	√	√	√	√	1.Configuration
		Instrument panel	√	√	√	√	√	1.Configuration
		Steering wheel switching module	√	√	√	√		
	Vehicle protection/Management of	Telamatics	√	√	√	√	√	1.Configuration
		Alarm	√	√	√			
Driver's door module		√	√	√	√	√		
	Passenger door module	√	√	√	√	√		

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function
	accesses	Retractable roof	√	√	√			
		Sun roof	√	√	√			
	Visibility/Lighting/Signalling	Rain/Brightness sensor	√	√	√			
		Right headlamp beam corrector	√	√	√	√	√	1.Configuration 2.Calibration
		Left headlamp beam level corrector	√	√	√	√	√	1.Configuration 2.Calibration
		Driving school module	√	√			√	
		Steering wheel switching module	√	√	√	√		
	Built-in systems interface(BSI)		√	√	√			1. Resetting to zero of the service mileage
		5FT MED17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		5FW MEV17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		5FX MED17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		5FV MED17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		5FS MEV17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		8FR MEV17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Petrol engine	5FY MED17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		8FS MEV17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		N6A ME745	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		N6B ME745	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		NFU ME745	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		NFU ME749 Bio Flex	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content
		MM6KP Bio flex	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the ethanol content

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		MM6KP Non Bio Flex	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the ethanol content
		RFJ MM6LPB	√	√	√	√	√	1.Configuration 2.Autoadaptive
		5FU MEVD17.4.2	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		EP6C 5FS MEV17.4.2	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		EP3C 8FP MEV17.4.2	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		EP3C 8FR MEV17.4.2	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		9HV EDC16C3	√	√	√	√	√	1.Configuration 2.Particulate filter regeneration 3.Replacement particle emission filter 4.Replacement of the particle emission filter and work on the additive adding circuit

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		9HX EDC16C3	√	√	√	√		1.Configuration 2.Injection classification
		9HY EDC16C3	√	√	√	√		1.Configuration 2.Injection classification
		9HZ EDC16C3	√	√	√	√		1.Configuration 2.Particulate filter regeneration 3.Replacement particle emission filter 4.Replacement of the particle emission filter and work on the additive adding circuit
		9HL HDI SID807	√	√	√	√	√	1.Configuration 2. Particle emission filter forced regeneration 3. Programming of the total quantity of additive injected into the particulate emission filter

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		9HR HDI SID807	√	√	√	√	√	1.Configuration 2. Particle emission filter forced regeneration 3. Programming of the total quantity of additive injected into the particulate emission filter
		9HR HDI SID807 BR2	√	√	√	√	√	1.Configuration 2. Particle emission filter forced regeneration 3. Programming of the total quantity of additive injected into the particulate emission filter
		9HL HDI SID807 BR2	√	√	√	√	√	1.Configuration 2. Particle emission filter forced regeneration 3. Programming of the total quantity of additive injected into the particulate emission filter

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
308	Diesel engine	9HG HDI SID807 BR2	√	√	√	√	√	1.Configuration 2. Particle emission filter forced regeneration 3. Programming of the total quantity of additive injected into the particulate emission filter
		9HP EDC17C10	√	√	√	√	√	1.Configuration 2. Particle emission filter forced regeneration 3. Programming of the total quantity of additive injected into the particulate emission filter
		8HR EDC17C10	√	√	√	√	√	1.Configuration 2. Particle emission filter forced regeneration 3. Programming of the total quantity of additive injected into the particulate emission filter

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		RHE DCM3.5	√	√	√	√	√	1.Configuration 2. Particle emission filter forced regeneration 3.Replacement particle emission filter 4. Programming of the total quantity of additive injected into the particulate emission filter
		RHH DCM3.5	√	√	√	√	√	1.Configuration 2. Particle emission filter forced regeneration 3.Replacement particle emission filter 4. Programming of the total quantity of additive injected into the particulate emission filter
		RHL DCM3.4	√	√	√	√	√	1.Configuration 2.particle emission filter 3.DPF

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		RHR DCM3.4	√	√	√	√	√	1.Configuration 2. Particle emission filter forced regeneration 3.Replacement particle emission filter 4. Programming of the total quantity of additive injected into the particulate emission filter
		RHF DCM3.4	√	√	√	√	√	1.Configuration 2. Particle emission filter forced regeneration 3.Replacement particle emission filter 4. Programming of the total quantity of additive injected into the particulate emission filter
		9HP EDC17C10_BR2	√	√	√	√	√	1.Configuration Injectors 2. Particle emission filter forced regeneration 3.Replacement particle emission filter

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		9HJ EDC17C10_BR2	√	√	√	√	√	1.Configuration Injectors 2. Particle emission filter forced regeneration 3.Replacement particle emission filter
	A/T	CFC300P gearbox	√	√	√	√	√	
		AM6C gearbox	√	√	√	√	√	1.Configuration 2.Oil wear counter
		AL4 gearbox	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		AM6 Euro5 automatic gearbox	√	√	√	√	√	1.Configuration 2. Oil wear counter
		AT6 Euro5 automatic gearbox	√	√	√	√	√	1.Configuration 2.Oil wear counter
		Multiplexed additive adding pump	√	√	√			
	Vehicle protection / Management of accesses	Alarm	√	√	√	√	√	1.Configuration
		Driver's door module	√	√	√	√	√	
	Active and passive safety	ABS 8.1	√	√	√	√	√	1.Configuration 2.Bleeding
		ESP 8.1	√	√	√	√	√	1.Configuration 2.Bleeding
		Air-bag	√	√	√	√		1.Configuration 2.lock and unlock
		Lane departure warning	√	√	√			

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function
	Driving assistance/comfort	Air conditioning	√	√	√	√	√	1.Configuration
		Electropump assembly	√	√	√			
		Drivers seat memory unit	√	√	√			
		Parking assistance	√	√	√	√	√	1.Configuration
		Under inflation detection	√	√	√	√		
	Inform the driver/Audio/Communication	Multifunction screen	√	√	√			
		Radio	√	√	√	√	√	1.Configuration
		Instrument panel	√	√	√	√	√	1.Configuration
		Hands Free Kit	√	√	√	√	√	1.Configuration
		Not Fastened warning light(TNB)	√					
		Telematics	√	√	√	√	√	1.Configuration
		Steering wheel switching module	√	√	√			
		CD player	√	√	√		√	
		Audio amplifier	√	√	√			
		Battery charge status unit	√	√	√	√		1.Configuration
		Services Module	√	√	√			
			BSM	√	√	√	√	√
		BSR	√	√	√	√	√	
	Visibility/Lighting/Signalling	Rain sensor	√	√	√			
		Discharge bulb with directional dipped headlamp	√	√	√			
		Driving school module	√	√			√	

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Built-in systems interface(BSI)		√	√	√			1. Resetting to zero of the service mileage
	Diesel engine	RHE DCM3.5	√	√	√	√	√	1.Configuration 2. Particle emission filter forced regeneration 3.Replacement particle emission filter 4. Programming of the total quantity of additive injected into the particulate emission filter
		RHH DCM3.5	√	√	√	√	√	1.Configuration 2. Particle emission filter forced regeneration 3.Replacement particle emission filter 4. Programming of the total quantity of additive injected into the particulate emission filter
		5FS MEV17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		8FR MEV17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
RCZ	Petrol engine	5FT MED17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		5FW MEV17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		5FX MED17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		5FY MED17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		8FS MEV17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		5FV MED17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		5FU MEVD17.4.2	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		EP3C 8FP MEV17.4.2	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		EP3CM 8FP MEV17.4.2	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		EP3C 8FR MEV17.4.2	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		EP6C 5FS MEV17.4.2	√	√	√	√	√	1.Configuration 2.Initialization Adaption
	AM6 Euro5 automatic gearbox	√	√	√	√			

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function	
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation		
	Gearbox	Multiplexed additive adding pump/Pompe mux TI	√	√	√	√			
		AT6 Euro5 automatic gearbox	√	√	√	√			
	Driving assistance/Comfort	Heating/ventilation	√	√	√	√			
		Electropump assembly	√	√	√	√			
		Parking assistance	√	√	√	√			
		Pedestrian impact detection unit	√	√	√	√			
		Under inflation detection	√	√	√	√			
		Moving panel deflector	√	√	√	√			
		Drivers seat memory unit	√	√	√	√			
	Vehicle protection	Alarm	√	√	√	√			
		Driver's door control pad	√	√	√	√			
	Active and passive safety	Air-bag	√	√	√	√			
		ESP8.1	√	√	√	√			
			Battery charge status unit	√	√	√	√		1.Configuration
			CD player	√	√	√			
			Radio	√	√	√	√		
			Portable unit	√	√	√	√		
			Instrument panel	√	√	√	√		
			Multifunction screen(EMF_A)	√	√	√	√		

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Inform the driver/Audio/Communication	Multifunction screen(EMF_C)	√	√	√	√		
		Not Fastened warning light(TNB)	√					
		Control panel dot matrix display	√	√	√	√		
		Steering wheel switching module	√	√	√	√		
		telematics/Radio navigation NG4	√	√	√	√		
		Radio	√	√	√	√		
		Audio amplifier	√	√	√			
		BSM	√	√	√	√	√	
		BSR	√	√	√	√	√	
	Visibility/Lighting/Signalling	Discharge bulbs vertical and horizontal adjustment	√	√	√	√		
		Windscreen wiper	√	√	√	√		
		Rain / brightness sensor	√	√	√			
		N6A ME7.4.4	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
	N6B ME7.4.4	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives	

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function
405	Petrol engine	NFU ME7.4.4	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		LFY BOSCH MP7.3	√	√	√	√	√	1.Configuration 2.Initialization Adapation
		L6A SAGEM SL96	√	√	√	√		
		1600RD SL96	√	√	√	√		
		LFZ SAGEM S2000	√	√	√	√	√	1.Initialization Adapation
		NFU J35	√	√	√	√	√	1.Configuration
406	Petrol engine	KFX SAGEM SL96	√	√	√	√	√	1.Initialization Adapation
		LFY BOSCH MP7.3	√	√	√	√	√	1.Initialization Adapation
		LFY BOSCH MP5.2	√	√	√	√		
		LFX MM1AP	√	√	√	√	√	1.Initialization Adapation 2.Ignition advance setting
		LFY SAGEM SL96	√	√	√	√	√	1.Initialization Adapation
	Diesel engine	RHZ BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service 3.DPF
	Active safety	ABS BOSCH 5.3	√	√	√	√	√	
		Electronically managed suspension	√	√	√	√		
	A/T	AL4 autoadaptive automatic gearbox	√	√	√	√		
	Air bag	Air bag and seat belt	√	√	√			1.Marchting
	Left Air bag	Left side airbag	√	√	√			1.Marchting

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function
	Right Air bag	Right side airbag	√	√	√			1.Marchting
406 COUPE	Air bag	Air bag and seat belt	√	√	√			1.Marchting
	Left Air bag	Left side airbag	√	√	√			1.Marchting
	Right Air bag	Right side airbag	√	√	√			1.Marchting
	A/T	AL4 autoadaptive automatic Gearbox	√	√	√	√		
	ABS	BOSCH ABS5.3	√	√	√	√		
	Built-in systems interface(BSI)		√	√	√	√		1.keys of programming 2. Resetting to zero of the service mileage
	Petrol engine	XFX BOSCH ME 746	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		LFY BOSCH MP5.2	√	√	√	√		
		LFX MM1AP	√	√	√	√	√	1.Initialization Adaption 2.Ignition advance setting
		LFY SAGEM SL96	√	√	√	√	√	1.Initialization Adaption
		LFY BOSCH MP7.3	√	√	√	√	√	1.Initialization Adaption
		3FZ MM4MP2	√	√	√	√	√	
		RFN MM48P	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		R6F MM48P	√	√	√	√	√	1.Initialization Adaption
		RFR MM48P	√	√	√	√	√	1.Initialization Adaption
		6FZ SAGEM S2000	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		RLZ SIEMENS IRIUS81	√	√	√	√	√	1.Initialization Adaption

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
406R	Diesel engine	RHY BOSCH EDC15C2	√	√	√	√		1.DPF
		4HX BOSCH EDC15C2	√	√	√	√		
		RHY SIEMENS SID 801	√	√	√	√	√	1.Configuration
		RHS BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service
		RHZ BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service 3.DPF
		Diesel fuel additive control unit	√	√	√	√	√	1.Configuration
	ABS	ESP BOSCH 5.3	√	√	√	√		
		ABS BOSCH 5.3	√	√	√	√	√	
		Alarm	√	√	√	√	√	1.Configuration
		Rain/brightness sensor	√	√	√			
	A/C	Air conditioning	√	√	√	√	√	
	Driver information	Multi-function display	√	√	√	√	√	1.Configuration
		Radio	√	√	√	√	√	1.Configuration
		CD player	√	√	√	√	√	
		On-board navigation system	√	√	√	√		
		Switch unit under steering wheel(COM 2000)	√	√	√	√		
		Instrument panel	√	√	√	√	√	1.Configuration
A/T	AL4 autoadaptive automatic gearbox	√	√	√	√			

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function
	Air bag	Air bags(SAC-CENT-AUTOLIV-2)	√	√	√	√		1.Configuration 2.lock and unlock
		Air bag and seat belt	√	√	√			1.Marchting
		Left side airbag	√	√	√			1.Marchting
		Right side airbag	√	√	√			1.Marchting
	Built-in systems interface(BSI)		√	√	√	√		1.keys of programming 2. Resetting to zero of the service mileage
	Petrol engine	XFX BOSCH ME 746	√	√	√	√	√	1.Configuration 2.Initialization Adapatation
		LFY BOSCH MP5.2	√	√	√	√		
		LFX MM1AP	√	√	√	√	√	1.Initialization Adapatation 2.Ignition advance setting
		LFY SAGEM SL96	√	√	√	√	√	1.Initialization Adapatation
		LFY BOSCH MP7.3	√	√	√	√	√	1.Initialization Adapatation
		3FZ MM4MP2	√	√	√	√	√	
		RFN MM48P	√	√	√	√	√	1.Configuration 2.Initialization Adapatation
		R6F MM48P	√	√	√	√	√	1.Initialization Adapatation
		RFR MM48P	√	√	√	√	√	1.Initialization Adapatation
		6FZ SAGEM S2000	√	√	√	√	√	1.Configuration 2.Initialization Adapatation
		RLZ SIEMENS IRIUS81	√	√	√	√	√	1.Initialization Adapatation
		RHY BOSCH EDC15C2	√	√	√	√		1.DPF
4HX BOSCH EDC15C2	√	√	√	√				

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
406R COUPE	Diesel engine	RHY SIEMENS SID 801	√	√	√	√	√	1.Configuration
		RHS BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service 3.DPF
		RHZ BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service 3.DPF
		Diesel fuel additive control unit	√	√	√	√	√	1.Configuration
	ABS	ESP BOSCH 5.3	√	√	√	√		
		ABS BOSCH 5.3	√	√	√	√	√	
		Alarm	√	√	√	√	√	1.Configuration
		Rain/brightness sensor	√	√	√			
	A/C	Air conditioning	√	√	√	√	√	
	Driver information	Multi-function display	√	√	√	√	√	1.Configuration
		Radio	√	√	√	√	√	1.Configuration
		CD player	√	√	√	√	√	
		On-board navigation system	√	√	√	√		
		Switch unit under steering wheel(COM 2000)	√	√	√	√		
		Instrument panel	√	√	√	√	√	
	A/T	AL4 autoadaptive automatic gearbox	√	√	√	√		

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function
	Air bag	Air bags(SAC-CENT-AUTOLIV-2)	√	√	√	√		1.Configuration 2.lock and unlock
		Air bag and seat belt	√	√	√			1.Marchting
		Left side airbag	√	√	√			1.Marchting
		Right side airbag	√	√	√			1.Marchting
	Built-in systems interface(BSI)		√	√	√			1. Resetting to zero of the service mileage
		RHR SIEMENS SID 803	√	√	√	√	√	1.Configuration 2.After-sales particulate emission filter repair operation
		RHL SIEMENS SID 803	√	√	√	√	√	1.Configuration 2.After-sales particulate emission filter repair operation
		RHL DCM3.4	√	√	√	√	√	1.Configuration 2. Particle emission filter forced regeneration 3.Replacement particle emission filter 4. Programming of the total quantity of additive injected into the particulate emission filter

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		RHR DCM3.4	√	√	√	√	√	1.Configuration 2. Particle emission filter forced regeneration 3.Replacement particle emission filter 4. Programming of the total quantity of additive injected into the particulate emission filter
		RHF DCM3.4	√	√	√	√	√	1.Configuration 2. Particle emission filter forced regeneration 3.Replacement particle emission filter 4. Programming of the total quantity of additive injected into the particulate emission filter

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		RHH DCM3.5	√	√	√	√	√	1.Configuration 2. Particle emission filter forced regeneration 3.Replacement particle emission filter 4. Programming of the total quantity of additive injected into the particulate emission filter
		UHZ SIEMENS SID 201	√	√	√	√	√	1.Configuration 2. Particle emission filter forced regeneration 3.Replacement particle emission filter 4. Programming of the total quantity of additive injected into the particulate emission filter

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Diesel engine	4HP BOSCH EDC16CP39	√	√	√	√	√	1.Configuration 2.Injection classification configuration 3.Particle Emission filter forced regeneration 4.Replacement of the particle emission filter and work on the additive adding circuit
		4HR BOSCH EDC16CP39	√	√	√	√	√	1.Configuration 2.Injection classification configuration 3.Particle Emission filter forced regeneration 4.Replacement of the particle emission filter and work on the additive adding circuit

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
407		4HS BOSCH EDC16CP39	√	√	√	√	√	1.Configuration 2.Injection classification configuration 3.Particle Emission filter forced regeneration 4.Replacement of the particle emission filter and work on the additive adding circuit
		4HT BOSCH EDC16CP39	√	√	√	√	√	1.Configuration 2.Injection classification configuration 3.Particle Emission filter forced regeneration 4.Replacement of the particle emission filter and work on the additive adding circuit
		9HT BOSCH EDC16C3	√	√	√	√	√	1.Injection classification 2.Forced regeneration vehicle stationary 3.Forced regeneration vehicle moving
		9HY BOSCH EDC16C3 EUR03 (CAN)	√	√	√			1.Injection classification

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		9HY BOSCH EDC16C3 EUR03 (KWP)	√	√	√	√	√	1.Injection classification 2.Forced regeneration vehicle stationary 3.Forced regeneration vehicle moving
		9HZ BOSCH EDC16C3	√	√	√	√	√	1.Injection classification 2.Forced regeneration vehicle stationary 3.Forced regeneration vehicle moving
		EDC17CP11	√	√	√	√	√	1.Injection classification 2.Forced regeneration vehicle stationary 3.Forced regeneration vehicle moving
		3FZ MM6LP	√	√	√	√	√	1.Configuration
		RFJ MM6LPB	√	√	√	√	√	1.Configuration 2.Autoadaptive 3.Programming / Pairing
		3FY MM6LPB	√	√	√	√	√	1.Configuration 2.Autoadaptive 3.Programming / Pairing
		6FY MM6LPB	√	√	√	√	√	1.Configuration 2.Autoadaptive 3.Programming / Pairing

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Petrol engine	6FZ S2000PM2	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		RFN MM6LP	√	√	√	√		
		MM6KP Bio flex	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the ethanol content
		MM6KP Non Bio Flex	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the ethanol content
		Diesel fuel additive control unit	√	√	√	√	√	1.Configuration
	ABS	ESP8.1	√	√	√	√	√	1.Configuration 2.Bleeding
		ESP EBC 440(KWP)	√	√	√	√		
	A/T	AL4 automatic gearbox	√	√	√	√	√	1.Marchting 2.Oil wear counter
		4HP20 automatic gearbox	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		AM6 automatic gearbox	√	√	√	√	√	1.Configuration 2. Oil wear counter

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		AM6 Euro5 automatic gearbox	√	√	√	√		
	Air bag	Airbag ECU	√	√	√	√		1.Configuration 2.lock and unlock
	Inform the driver Audio/Communication	Muti-function display	√	√	√	√		
		Radio	√	√	√	√	√	1.Configuration
		CD player	√	√	√		√	
		Instrument panel	√	√	√	√	√	
		Telematics	√	√	√	√	√	1.Configuration
		Hands Free Kit	√	√	√	√	√	1.Configuration
	Vehicle protection Management of accesses	Alarm	√	√	√	√	√	1.Configuration
		Driver's door module	√	√	√	√	√	
		Passenger door module	√	√	√	√	√	
	Visibility Lighting/Signalling	Control unit windscreen wipers	√	√	√	√		
		Rain/Brightness sensor	√	√	√			
		Steering wheel switching module	√	√	√	√	√	
		Parking assistance	√	√	√	√	√	1.Configuration
		Air conditioning	√	√	√	√	√	
		Additional heating	√	√	√	√	√	
		Power steering	√	√	√	√	√	

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Driving assistance/Comfort	Piloted suspension	√	√	√	√	√	1.Programming of the heights 2.Programming of the type of headlamp
		Battery charge status unit	√	√	√	√		1.Configuration
		Stop and Star battery charge status unit	√	√	√	√		1.Configuration
		Under inflation detection	√	√	√	√		
	Built-in systems interface(BSI)		√	√	√			1. Resetting to zero of the service mileage
		NFU ME745	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		NFU ME749 Bio Flex	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content
		MM6KP Bio flex	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the ethanol content

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
408	Petrol engine	MM6KP Non Bio Flex	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the ethanol content
		RFJ MM6LPB	√	√	√	√	√	1.Configuration 2.Autoadaptive
		5FT MED17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		5FX MED17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		5FY MED17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		5FW MEV17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		8FS MEV17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		EP3C 8FP MEV17.4.2	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		EP3CM 8FP MEV17.4.2	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		EP3C 8FR MEV17.4.2	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		EP6C 5FS MEV17.4.2	√	√	√	√	√	1.Configuration 2.Initialization Adaption

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Diesel engine	9HR HDI SID807 BR2	√	√	√	√	√	1.Configuration 2. Particle emission filter forced regeneration 3. Programming of the total quantity of additive injected into the particulate emission filter
		9HL HDI SID807 BR2	√	√	√	√	√	1.Configuration 2. Particle emission filter forced regeneration 3. Programming of the total quantity of additive injected into the particulate emission filter
		9HG HDI SID807 BR2	√	√	√	√	√	1.Configuration 2. Particle emission filter forced regeneration 3. Programming of the total quantity of additive injected into the particulate emission filter
		BSM	√	√	√	√	√	
		BSR	√	√	√	√	√	
		Built-in systems interface(BSI)	√	√	√			

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Petrol engine	MM6KP Bio flex	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		MM6KP Non Bio Flex	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		MED17.4.2	√	√	√	√	√	1.Configuration 2.Initialization Adapatation
		MEV17.4.2	√	√	√	√	√	1.Configuration 2.Initialization Adapatation
	Diesel engine	HDI SID807 BR2	√	√	√	√	√	1.Configuration
		DCM34	√	√	√	√	√	1.Configuration
		DCM3.5 BR2	√	√	√	√	√	1.Configuration
		EDC17CP42	√	√	√	√	√	1.Configuration
	AT	BVA_AM6_AT6_EURO5	√	√	√	√	√	1.Configuration
		CFC300P	√	√	√	√	√	
	ABS	ABS 8.1	√	√	√	√	√	1.Configuration
		ESP 8.1	√	√	√	√	√	1.Configuration
		SRS	√	√	√	√	√	1.Configuration
		COMBINE	√	√	√	√	√	
		AIRCONDITION	√	√	√	√	√	
		Power steering electric pump unit	GEP	√	√	√	√	
	Under-inflation detection (DSG)	DSG	√	√	√	√		

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
508	Active damper electronic unit	BEBA	√	√	√	√		
	Battery charge status unit	BECB_GEN2	√	√	√	√		
	Electric secondary brake	FSE	√	√	√	√		
	Discharge bulbs vertical and horizontal adjustment	LADCT	√	√	√	√		
	Additional heating	CHAUFF_ADD	√	√	√	√		
	Engine relay unit	BSM_2010	√	√	√	√		
	Trailer relay unit	BSG_2010_RQ	√	√	√	√		
	Airbag	RBG_UDS	√	√	√	√		
	Parking assistance	AAS_UDS	√	√	√	√		
	Anti-theft alarm	ALARME	√	√	√	√		
	Instrument panel	COMBINE_UDS	√	√	√	√		
	Multifunction screen	EMF_A_UDS	√	√	√			
		EMF_C_UDS	√	√	√	√		
	Data communication ECU RT6	RNEG2010	√	√	√	√		
	Independent telematic unit (BTA)	BTA	√	√	√	√		
	Multiplexed control panel	FMUX	√	√	√	√		
	Matrix screen integral to the instrument panel	MATT_C_2010	√	√	√			
		MATT_M_2010	√	√	√			
	RD5 radio	RD5	√	√	√	√		
	Hands-free control unit	BML	√	√	√	√		
Telematic navigator	CRT_UDS	√			√			
Radio amplifier	AMPLI_AUDIO	√	√	√				

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Switch module under the steering wheel (top of colum)	COM2008P	√	√	√	√		
	Seat belts not fastened LED unit (TNB)	TNB_2010	√					
	Supply protection and management unit	BPGA2010	√	√	√	√		
	Steering wheel with integral controls (VSI)	VCI	√	√	√	√		
	Rain and brightness sensor (CDPL)	PLUIE_LUMINOSITE_UDS	√	√	√	√		
	Air conditioning	CLIM_REGULEE_UDS	√	√	√	√		
	Rear air conditioning	CLIM_AR	√			√		
	Motorised Boot ECU	COFFRE_MOTORISE	√	√	√	√		
	Driver's seat memorizing unit	BDMC	√	√	√	√		
	Driver's door control pad	PDPC	√	√	√	√		
	Central voltage retention device	DMTC	√	√	√	√		
	Electronic key reader	LCE	√	√	√	√		
	High Head Vision	VTH_UDS	√	√	√	√		
	Main beams assistant ECU	RETRO_INT	√	√	√	√		
	Windscreen wiper (left-hand side)	MOTEV_UDS	√	√	√	√		
	Windscreen wiper (right-hand side)	MOTED_UDS	√	√	√	√		
	Electric steering lock	AVE	√	√	√	√		

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
4007	Built-in systems interface(BSI)		√	√	√	√		
	Diesel engine	4HK EDC16CP39	√	√	√	√		1.DPF
		4HN EDC16CP39	√	√	√	√		1.DPF
	Petrol engine	AFZ 4B11 MIVEC EURO4	√	√	√	√		
		SFY 4B12 MIVEC EURO5	√	√	√	√		
		SFZ 4B12 MIVEC EURO4	√	√	√	√		
	A/T	CVT gearbox	√	√	√	√		
		DCT controlled gearbox	√	√	√	√		
	Engine/Automatic Gearbox/Transmission	4x4 transmission	√	√	√	√		
		LEVIER GETRAG	√	√	√	√		
	Inform the driver/Audio/Communication	Radio	√	√	√	√		
		Navigation	√	√	√			
		Instrument panel	√	√	√	√		
		Hands Free Kit	√	√	√	√		
	Vehicle protection/Management of accesses	Coded immobiliser	√	√	√	√		
		Driver's door control panel	√	√	√	√		
		Passenger's door control panel	√	√	√	√		
		Rear left door control pad	√	√	√	√		
		Rear right door control	√	√	√	√		
		Sun roof	√	√	√	√		
	Active and passive safety	Air bag	√	√	√	√		
ABS or ESP ECU		√	√	√	√			
Flywheel angle sensor		√	√	√				
Visibility	Static AFS	√	√	√	√			

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Lighting/Signalling	Rain and brightness sensor						
	Driving assistance/Comfort	Air conditioning	√	√	√	√		
607 VAN	BSI		√	√	√	√	√	1.Initialization Adaption
	Petrol engine	3FZ MM4MP2	√	√	√	√	√	
		RFN MM48P(Mechanical throttle housing)	√	√	√	√	√	1.Initialization Adaption
		RFN MM4MP2(Motorised butterfly)	√	√	√	√	√	
		R6F MM4.8P	√	√	√	√	√	1.Initialization Adaption
		XFX BOSCH ME7.4.6	√	√	√	√	√	1.Configuration 2.Initialization Adaption
	Diesel engine	RHS BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service 3.DPF
		4HX BOSCH EDC15C2	√	√	√	√		
		RHZ BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service 3.DPF
	Active safety	ESP BOSCH 5.3	√	√	√	√		
		ABS BOSCH 5.3	√	√	√	√	√	
		Electronically managed suspension	√			√	√	1.Configuration
	A/T	BVA ZF	√	√	√	√		
		4HP20 gearbox	√	√	√	√	√	1.Configuration 2.Initialization Adaption

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Air bag	Air bag	√	√	√			
	Driver information	Multi-function display	√	√	√	√	√	
		Parking assistance	√	√	√	√	√	
		Instrument panel	√	√	√		√	1.Configuration
		CD player	√	√	√	√	√	
		Radio	√	√	√	√	√	1.Configuration
	switch control	Driver's door control panel	√	√	√	√		
		Passenger's door control panel	√	√	√	√		
	Visibility/Lighting	Headlamp height corrector	√	√	√	√	√	
		storing of the driving position	√	√	√	√		
		Diesel fuel additive control unit	√	√	√	√	√	1.Marching
	A/C	Air conditioning	√	√	√	√	√	1.Configuration
	Built-in systems interface(BSI)		√	√	√			1. Resetting to zero of the service mileage
	Petrol engine	3FZ MM6LP	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		3FY MM6LPB	√	√	√	√	√	1.Configuration 2.Autoadaptive
		XFV ME747	√	√	√	√	√	1.Configuration 2.Initialization Adaption

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		UHZ SIEMENS SID 201	√	√	√	√	√	1.Configuration 2. Particle emission filter forced regeneration 3.Replacement particle emission filter 4. Programming of the total quantity of additive injected into the particulate emission filter
		4HP BOSCH EDC16CP39	√	√	√	√	√	1.Configuration 2.Injection classification configuration 3.Particle Emission filter forced regeneration 4.Replacement of the particle emission filter
		4HR BOSCH EDC16CP39	√	√	√	√	√	1.Configuration 2.Injection classification configuration 3.Particle Emission filter forced regeneration 4.Replacement of the particle emission filter

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
607 CAN	Diesel engine	4HS BOSCH EDC16CP39	√	√	√	√	√	1.Configuration 2.Injection classification configuration 3.Particle Emission filter forced regeneration 4.Replacement of the particle emission filter
		4HT BOSCH EDC16CP39	√	√	√	√	√	1.Configuration 2.Injection classification configuration 3.Particle Emission filter forced regeneration 4.Replacement of the particle emission filter
		RHL SIEMENS SID 803	√	√	√	√	√	1.Configuration 2.After-sales particulate emission filter repair operation
		RHR SIEMENS SID 803	√	√	√	√	√	1.Configuration 2.After-sales particulate emission filter repair operation
		4HX BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Forced PF regeneration

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		RHS BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Forced PF regeneration
	AT ECU	AM6 automatic gearbox	√	√	√	√	√	1.Configuration 2. Oil wear counter
		4HP20 automatic gearbox	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		Diesel fuel additive control unit	√	√	√	√	√	1.Configuration
	ABS	ESP BOSCH 8	√	√	√	√	√	1.Configuration 2.Bleeding 3.Steering wheel angle sensor cal
	Air bag	Airbag ECU	√	√	√	√		1.Configuration 2.lock and unlock
	Driving assistance/Comfort	Parking assistance	√	√	√	√	√	1.Configuration
		Drivers seat memory unit	√	√	√			
		Air conditioning	√	√	√	√	√	
		Under inflation detection	√	√	√	√		
		Piloted suspension	√	√	√	√	√	1.Programming of the heights
		Power steering	√	√	√	√	√	
	Inform the	Radio	√	√	√	√	√	1.Configuration
		CD player	√	√	√		√	
		Instrument panel	√	√	√	√	√	1.Configuration

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	In front of the driver/Audio/Communication	Steering wheel switching module	√	√	√	√	√	
		Hands Free Kit	√	√	√	√	√	1.Configuration
		Telamatics	√	√	√	√	√	1.Configuration
	Vehicle protection/Management of accesses	Alarm	√	√	√	√	√	1.Configuration
		Driver's door module	√	√	√	√	√	
		Passenger door module	√	√	√	√	√	
	Visibility/Lighting/Signalling	Rain/Brightness sensor	√	√	√			
806	Petrol engine	R6F MM4.8P	√	√	√	√	√	1.Initialization Adaption
		RFN MM4.8P	√	√	√	√	√	1.Configuration 2.Initialization Adaption
	Diesel engine	RHW BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Filter
		RHZ BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service 3.DPF
	ABS	BOSCH ABS5.3	√	√	√	√		
	AT	AL4 autoadaptive automatic gearbox	√	√	√	√	√	1.Configuration 2.Initialization Adaption 3. Oil wear counter
	Air bag	Air bag and seat belt	√	√	√			1.Marching
	Additional heating		√	√	√	√	√	
		BSI		√	√	√	√	
		RHW BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Filter

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
807 VAN	Diesel engine	RHM BOSCH EDC15C2	√	√	√	√		
		RHT BOSCH EDC15C2	√	√	√	√		
		4HW BOSCH EDC15C2	√	√	√	√		
	ABS	ABR BOSCH 5.7	√	√	√	√		
		ESP BOSCH 5.7	√	√	√	√	√	
	Driver information	Display/Telematics	√	√	√	√	√	
		Warning light and odometer ECU	√	√	√	√		
		Parking assistance	√	√	√	√		
		CD player	√	√	√	√		
		Instrument panel	√	√	√	√	√	
		Switch unit under steering wheel(COM 2000)	√	√	√	√		
		radio/telematic receive control	√	√	√	√	√	
	Visibility/Lighting	Switch unit under steering wheel(COM 2000)	√	√	√	√		
		Right headlamp beam corrector	√	√	√	√		
		Left headlamp beam level corrector	√	√	√	√		
	switch control	Driver's door module	√	√	√	√		
		Sliding side door	√	√	√	√		
		Passenger's door module	√	√	√	√		

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	A/C	WEBASTO additional heating	√	√	√	√		
		Climate control	√	√	√	√		
	Air bag	Air bag	√	√	√	√		
		Diesel fuel additive control unit	√	√	√	√		
		Alarm	√	√	√	√	√	
		Storing of the driving position	√	√	√	√		
	Petrol engine	3FZ MM4MP2	√	√	√	√		
		3FZ MM6LP	√	√	√	√		
		R6F MM4.8P	√	√	√	√	√	1.Initialization Adaption
		RFN MM48P(Mechanical throttle housing)	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		RFN MM4MP2(Motorised butterfly)	√	√	√	√		
		RFN MM6LP	√	√	√	√		1.Initialization Adaption
		XFW BOSCH ME746	√	√	√	√		
	Built-in systems interface(BSI)		√	√	√	√		1.keys of programming 2. Resetting to zero of the service mileage
	Petrol engine	RFJ MM6LPB	√	√	√	√	√	1.Configuration 2.Autoadaptive

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		4HW BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Configuration of part mileage
		4HP EDC16CP39	√	√	√	√	√	1.Configuration 2.Injection classification configuration 3.Particle Emission filter forced regeneration 4.Replacement of the particle emission filter and work on the additive adding circuit
		4HR EDC16CP39	√	√	√	√	√	1.Configuration 2.Injection classification configuration 3.Particle Emission filter forced regeneration 4.Replacement of the particle emission filter and work on the additive adding circuit

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Diesel engine	4HS EDC16CP39	√	√	√	√	√	1.Configuration 2.Injection classification configuration 3.Particle Emission filter forced regeneration 4.Replacement of the particle emission filter and work on the additive adding circuit
		4HT EDC16CP39	√	√	√	√	√	1.Configuration 2.Injection classification configuration 3.Particle Emission filter forced regeneration 4.Replacement of the particle emission filter and work on the additive adding circuit
		RHK SIEMENS SID 803	√	√	√	√	√	1.Configuration 2.DPF
		RHL SIEMENS SID 803	√	√	√	√	√	1.Configuration 2.DPF
		RHR SIEMENS SID 803	√	√	√	√	√	1.Configuration 2.DPF

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
807 CAN		RHM BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Filter 3.DPF
		RHT BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Filter 3.DPF
		RHH DCM3.5	√	√	√	√	√	1.Configuration 2. Particle emission filter forced regeneration 3.Replacement particle emission filter 4. Programming of the total quantity of additive injected into the particulate emission filter
		RHD DCM3.5	√	√	√	√	√	1.Configuration 2. Particle emission filter forced regeneration 3.Replacement particle emission filter 4. Programming of the total quantity of additive injected into the particulate emission filter

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		RHW BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Filter
		Diesel fuel additive control unit	√	√	√	√	√	1.Configuration
	ABS	ESP 8.1	√	√	√	√		
		ESP BOSCH 8	√	√	√	√	√	1.Configuration 2.Bleeding 3.Steering wheel angle sensor cal
	Air bag	Airbag ECU	√	√	√	√		1.Configuration 2.lock and unlock
	A/T	BVA AL4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		BVA_AM6C	√	√	√	√	√	1.Configuration 2.Oil wear counter
	Driving assistance/Comfort	Additional heating	√	√	√	√	√	
		Air conditioning	√	√	√	√	√	
		Driver's door module	√	√	√	√	√	
		Drivers seat memory unit	√	√	√			
		Parking assistance	√	√	√	√	√	1.Configuration
		Power steering GEP	√	√	√	√	√	
		Under inflation detection	√	√	√	√		
		CD player	√	√	√		√	
		Hands Free Kit	√	√	√	√	√	1.Configuration
		Instrument panel	√	√	√	√	√	

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function
	Inform the driver/Audio/Communication	Multi-function display	√	√	√			
		Radio	√	√	√	√	√	1.Configuration
		Telematic receiver control	√					
		Telematics	√	√	√	√	√	1.Configuration
		Warning lights/odometer unit	√	√	√			
	Vehicle protection/Management of accesses	Alarm	√	√	√			
		Front sunroof	√	√	√			
		Middle sunroof	√	√	√			
		Rear sunroof	√	√	√			
		Passenger door module	√	√	√	√	√	
		Sliding side doors module	√	√	√			
	Visibility/Lighting/Signalling	Left headlamp beam level corrector	√	√	√	√	√	
		Rain/brightness sensor	√	√	√			
		Right headlamp beam corrector	√	√	√	√	√	
		Steering wheel switching module	√	√	√			
		Built-in systems interface(BSI)		√	√	√		
		5FS MEV17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		5FV MED17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Petrol engine	5FW MEV17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		5FX MED17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		5FV MED 17.4.2 Euro5	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		9HL HDI SID807	√	√	√	√	√	1.Configuration 2. Particle emission filter forced regeneration 3. Programming of the total quantity of additive injected into the particulate emission filter
		9HR HDI SID807	√	√	√	√	√	1.Configuration 2. Particle emission filter forced regeneration 3. Programming of the total quantity of additive injected into the particulate emission filter

PEUGEOT V42.61 Diagnostics List (Note: For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Diesel engine	9HZ EDC16C3	√	√	√	√	√	1.Configuration 2.Particulate filter regeneration 3.Replacement particle emission filter 4.Replacement of the particle emission filter and work on the additive adding circuit
		RHE DCM3.5	√	√	√	√	√	1.Configuration 2. Particle emission filter forced regeneration 3.Replacement particle emission filter 4. Programming of the total quantity of additive injected into the particulate emission filter

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
5008		RHH DCM3.5	√	√	√	√	√	1.Configuration 2. Particle emission filter forced regeneration 3.Replacement particle emission filter 4. Programming of the total quantity of additive injected into the particulate emission filter
	Gearbox	AM6 Euro5 automatic gearbox	√	√	√	√		
		CFC300P gearbox	√	√	√	√		
		AT6 Euro5 automatic gearbox	√	√	√	√		
		Multiplexed additive adding pump/Pompe mux MGI	√	√	√	√		
		Multiplexed additive adding pump/Pompe mux TI	√	√	√	√		
		Air conditioning ECU	√	√	√	√		
		Electric parking brake	√	√	√	√		
		Electropump assembly	√	√	√	√		
		High Head Vision	√	√	√	√		

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Driving assistance/Comfort	Lane departure warning system	√	√	√	√		
		Under inflation detection	√	√	√	√		
		Parking aid	√	√	√	√		
		Assistance in complying with the inter-vehicle time (ARTIV)	√	√	√	√		
	Visibility/Lighting/Signalling	Headlamp height corrector	√	√	√	√	√	1.Configuration 2.Calibration
		Windscreen wiper	√	√	√	√		
		Rain / brightness sensor	√	√	√			
	Vehicle protection	Alarm	√	√	√	√		
		Driver's door control pad	√	√	√	√		
	Active and passive safety	Airbag ECU	√	√	√	√		1.Locking 2.Unlocking 3. Configuration
		Active and passive safety	√	√	√	√		
		Network isolation unit	√	√	√	√		
		Anti-slip mode selector	√	√	√	√		
		Battery charge status unit	√	√	√	√		1.Configuration
		Control panel dot matrix display	√	√	√	√		
Multifunction display(EMF_A)		√	√	√	√			

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Inform the driver/Audio/Communication	Multifunction display(EMF_C)	√	√	√	√		
		Not Fastened warning light(TNB)	√					
		Services module	√	√	√	√		
		Steering wheel switching module	√	√	√	√		
		Independent telematic	√	√	√	√		
		Control panel	√	√	√	√		
		telematics/RNEG radio navigation	√	√	√	√		
		telematics/Radio navigation NG4	√	√	√	√		
		Radio	√	√	√	√		
		CD player	√	√	√			
		Audio amplifier	√	√	√			
BIPPER	Petrol engine	KFT V34.2	√	√	√	√		
		KFV V34P	√	√	√	√		
	Diesel engine	8HS EDC16C34	√	√	√	√		
		HDI_8DF2	√	√	√	√		
	AT	BVMP	√	√	√	√		
		Controlled manual gearbox MTA	√	√	√	√		

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Built-in systems interface(BSI)		√	√	√	√		1.keys of programming 2. Resetting to zero of the service mileage
		HDY BOSCH MA3.1	√	√	√			
		HDZ BOSCH MA3.1	√	√	√			
		HFX BOSCH M7.4.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		KFX BOSCH MP7.3	√	√	√	√	√	1.Initialization Adaption
		KFX MM1AP	√	√	√	√		
		KFX SGEAM SL96	√	√	√	√	√	1.Initialization Adaption
		LFX MM1AP	√	√	√	√	√	1.Initialization Adaption 2.Ignition advance setting
		N6A BOSCH ME7.4.4	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		KFW SAGEM S2000	√	√	√	√	√	1.Marchting 2.Initialization Adaption
		K6D SAGEM S2000	√	√	√	√	√	1.Marchting 2.Initialization Adaption
		NFU BOSCH ME7.4.4	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		RFN MM6LP	√	√	√	√		1.Initialization Adaption
		KFW SAGEM S2000PM1	√	√	√	√	√	1.Configuration 2.Initialization Adaption

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Petrol engine	N6A BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Programming/Pairing
		N6B BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Programming/Pairing
		NFU BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Programming/Pairing
		NFU Or N6A BOSCH ME749	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content
		N6A BOSCH ME749 BIO FLEX	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Diesel engine	9HX BOSCH EDC16C3	√	√	√	√	√	1.Configuration 2.Injection classification 3.Forced regeneration vehicle stationary 4.Forced regeneration vehicle moving
		9HT BOSCH EDC16C3	√	√	√	√	√	1.Configuration 2.Injection classification 3.Forced regeneration vehicle stationary 4.Forced regeneration vehicle moving
		WJZ LUCAS DCN2	√	√	√	√		
	ABS	BOSCH ABS5.3	√	√	√	√		
		ABS BOSCH 8	√	√	√	√	√	1.Configuration 2.Bleeding
		ESP BOSCH 5.7						
		ESP BOSCH 8	√	√	√	√	√	1.Configuration 2.Bleeding 3.Steering wheel angle sensor cal
		ABS 8.1	√	√	√	√	√	1.Configuration 2.Bleeding
		ESP 8.1	√	√	√	√	√	1.Configuration 2.Bleeding

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Inform the driver/Audio/Communication	Telematics	√	√	√	√	√	1.Configuration
		Instrument panel	√	√	√	√	√	1.Configuration
		CD player	√	√	√	√	√	
		Radio PHILIPS	√	√	√	√	√	1.Configuration
		Radio CLARION	√	√	√	√	√	1.Configuration
	A/C	WEBASTO additional heating	√	√	√	√		
	Air bag	Air bag and seat belt	√	√	√			1.Marchting
		Air bags(SAC CENT AUTOLIV)	√	√	√	√		1.Configuration 2.lock and unlock
	Additional heating		√	√	√	√	√	
	Built-in systems interface(BSI)		√	√	√			1. Resetting to zero of the service mileage
	Petrol engine	N6A ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		N6B ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		NFU ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		NFR ME745	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		5FS MEV17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		5FK MEV17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		9HT EDC16C3	√	√	√	√	√	1.Configuration 2.Injection classification
		9HX EDC16C3	√	√	√	√	√	1.Configuration 2.Injection classification
		9HZ EDC16C3	√	√	√	√	√	1.Configuration 2.Particulate filter regeneration 3.Replacement particle emission filter 4.Replacement of the particle emission filter and work on the additive adding circuit

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
PARTNER B9	Diesel engine	9HS BOSCH EDC16C3	√	√	√	√	√	1.Configuration 2.Particulate filter regeneration 3.Replacement particle emission filter 4.Replacement of the particle emission filter and work on the additive adding circuit
		9HV EDC16C3	√	√	√	√	√	1.Configuration 2.Particulate filter regeneration 3.Replacement particle emission filter 4.Replacement of the particle emission filter and work on the additive adding circuit
		9HW EDC16C3	√	√	√	√	√	1.Configuration 2.Injection classification

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		9HL HDI SID807	√	√	√	√	√	1.Configuration 2. Particle emission filter forced regeneration 3. Programming of the total quantity of additive injected into the particulate emission filter
		9HJ EDC17C10_BR2 - DV6DTEDM - 92 CV	√	√	√	√	√	1.Configuration 2. Particle emission filter forced regeneration 3. Programming of the total quantity of additive injected into the particulate emission filter
		9HK EDC17C10_BR2 - DV6ETEDM - 75 CV	√	√	√	√	√	1.Configuration 2. Particle emission filter forced regeneration 3. Programming of the total quantity of additive injected into the particulate emission filter

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		9HE EDC17C10_BR2 - DV6DBM - 89 CV	√	√	√	√	√	1.Configuration 2. Particle emission filter forced regeneration 3. Programming of the total quantity of additive injected into the particulate emission filter
	Active and passive safety	ABS 8.1	√	√	√	√	√	1.Configuration 2.Bleeding
		ESP 8.1	√	√	√	√	√	1.Configuration 2.Bleeding
		Air bags	√	√	√	√		1.Configuration 2.lock and unlock
		Alarm	√	√	√	√	√	1.Configuration
	Visibility/Lighting/Signalling	Rain sensor	√	√	√			
	Inform the driver/Audio/Communication	Multifunction display (EMF)	√	√	√	√	√	1.Configuration
		Steering wheel switching module	√	√	√	√	√	
		Radio	√	√	√	√	√	1.Configuration
		Hands Free Kit	√	√	√	√	√	1.Configuration
		Instrument panel	√	√	√	√	√	1.Configuration
		CD player	√	√	√		√	
		Battery charge status unit	√	√	√	√		1.Configuration
		Telematics	√	√	√	√	√	1.Configuration

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Driving assistance/Comfort	Parking assistance	√	√	√	√		1.Configuration
		Air conditioning	√	√	√	√	√	1.Configuration
		Power steering	√	√	√	√	√	
		Under inflation detection	√	√	√	√		
EXPERT	Petrol engine	R6F MM4.8P	√	√	√	√	√	1.Initialization Adaption
		RFN MM4.8P	√	√	√	√	√	1.Configuration 2.Initialization Adaption
	Diesel engine	WJY LUCAS DCN2	√	√	√	√	√	1.Configuration
		RHW BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Filter 3.DPF
		RHX BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Filter 3.DPF
		RHZ BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service 3.DPF
	AT	AL4 autoadaptive automatic gearbox	√	√	√	√	√	1.Configuration 2.Initialization Adaption 3. Oil wear counter
	ABS	BOSCH ABS5.3	√	√	√	√		
	Air bag	Air bag and seat belt	√	√	√			1.Marchting
	Additional heating		√	√	√	√	√	
	Built-in systems interface(BSI)		√	√	√			1. Resetting to zero of the service mileage

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Petrol engine	RFH MM6KP(EW10A)	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the ethanol content
	Diesel engine	9HU BOSCH EDC16C3-EDC16C34	√	√	√	√	√	1.Configuration 2.Injection classification
		9HT BOSCH EDC16C3	√	√	√	√	√	1.Configuration 2.Injection classification
		RHH DCM3.5	√	√	√	√	√	1.Configuration 2. Particle emission filter forced regeneration 3.Replacement particle emission filter 4. Programming of the total quantity of additive injected into the particulate emission filter
		RHG SIEMENS SID 803	√	√	√	√	√	1.Configuration 2.DPF
		RHK SIEMENS SID 803	√	√	√	√	√	1.Configuration 2.DPF
		RHL SIEMENS SID 803	√	√	√	√	√	1.Configuration 2.DPF

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
EXPERT 2		RHR SIEMENS SID 803	√	√	√	√	√	1.Configuration 2.DPF
	Active and passive safety	ABS8_BOSCH	√	√	√	√	√	1.Configuration 2. Bleeding 3.Calibration of the steering wheel angle sensor
		ESP_BOSCH8	√	√	√	√	√	1.Configuration 2.Bleeding 3.Steering wheel angle sensor cal
		ABS8.1	√	√	√	√	√	1.Configuration 2.Bleeding
		ESP8.1	√	√	√	√	√	1.Configuration 2.Bleeding
		Airbag ECU	√	√	√	√		1.Configuration 2.lock and unlock
		Parking assistance	√	√	√	√	√	1.Configuration
	Driving assistance/Comfort	Air conditioning	√	√	√	√	√	1.Configuration
		Power steering	√	√	√	√	√	
		Pneumatic suspension	√	√	√	√	√	1.Configuration 2.Programming of the heights 3.Depressurisation 4.Pressurisation

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function
		Additional heating	√	√	√	√	√	
	Inform the driver/Audio/Communication	Multi-function display	√	√	√	√	√	1.Configuration
		Steering wheel switching module	√	√	√	√	√	
		Radio	√	√	√	√	√	1.Configuration
		Instrument panel	√	√	√	√	√	1.Configuration
		Hands Free Kit	√	√	√	√	√	1.Configuration
		CD player	√	√	√		√	
		Telematics	√	√	√	√	√	1.Configuration
Visibility/Lighting/Signalling	Rain/brightness sensor	√	√	√				
BOXER	Petrol engine	MM48p 2L essence plombee	√	√	√	√		
		MM48p 2L dual fuel(LPG)	√	√	√	√		
		MM48p 2L Unleaded	√	√	√	√		
	Diesel engine	2.0L HDI BOSCH EDC15C7		√	√	√	√	
BOXER 3	Built-in systems interface(BSI)		√	√	√			
	Active and passive safety	ABS 8.0	√	√	√	√	√	1.Bleeding
		ESP 8.0	√	√	√	√	√	1.Bleeding 2.Steering wheel angle sensor calibration
		ASR 8.0	√	√	√	√	√	1.Bleeding
		Power steering	√			√		
		ABS 8.0	√	√	√	√	√	1.Bleeding

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
BOXER 3 minibus	Active and passive safety	ESP 8.0	√	√	√	√	√	1.Bleeding 2.Steering wheel angle sensor calibration
		ASR 8.0	√	√	√	√	√	1.Bleeding
	Power steering	√			√			

PEUGEOT V42.61 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions				
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation
CONNECTOR	X431		DIAGUN				
SMART OBD	For all the cars except 307/607 can model cars after 2006 cars.	N/A					
OBD 16C	For all the cars except 307/607 can model cars after 2006 cars.	N/A					
CANBUS II	Just test 307/607 can model cars after 2006 cars. And need to add PEUGEOT/CITROEN-16 Converter connector.	N/A					
diagun connector	N/A	For all the cars.					
SUPER 16	For all the cars.	N/A					

























































































































































—

—



|

|

































































|

|