

Seat **V26.70** Diagnostics List (Note: For reference only)

MODEL	TYPE	SYSTEM	Functions
Exeo	3R	01 Engine electronics	B01,B02,B08,B05,S04,S10,B03,
		02 Transmission Electronics	B01,B02,B08,B05,S04,S10,B03,
		03 Brake Electronics	B01,B02,B08,B05,S04,S10,B03,
		08 AC/Heating electronics	B01,B02,B08,B05,S04,S10,B03,
		09 Electronic Ctrl Electronics	B01,B02,B08,B05,S04,S10,B03,
		10 Parking Assist System 2	B01,B02,B08,B05,S04,S10,B03,
		15 Airbags	B01,B02,B08,B05,S04,S10,B03,
		16 Steering Wheel Electronics	B01,B02,B08,B05,S04,S10,B03,
		17 Instrument Cluster	B01,B02,B08,B05,S04,S10,B03,
		25 Immobilizer	B01,B02,B08,B05,S04,S10,B03,
		37 Navigation	B01,B02,B08,B05,S04,S10,B03,
		36 Driver`s side seat adj.	B01,B02,B08,B05,S04,S10,B03,
		45 Interior Monitoring	B01,B02,B08,B05,S04,S10,B03,
		46 Central Control Module	B01,B02,B08,B05,S04,S10,B03,
		4C Tyre Pressure Monitor II	B01,B02,B08,B05,S04,S10,B03,
		55 Headlight range control	B01,B02,B08,B05,S04,S10,B03,
56 Radio	B01,B02,B08,B05,S04,S10,B03,		
77 TELEPHONE	B01,B02,B08,B05,S04,S10,B03,		
Toledo	1L	01 Engine electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		02 Transmission Electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		03 Brake Electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		15 Airbags	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		25 Immobilizer	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		41 Diesel pump electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		01 Engine electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15

Seat **V26.70** Diagnostics List (Note: For reference only)

MODEL	TYPE	SYSTEM	Functions
Leon/Toledo	1M	02 Transmission Electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		03 Brake Electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		08 AC/Heating electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		15 Airbags	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		17 Instrument Cluster	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		19 Gateway data bus	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		22 4WD Electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		35 Central Locking	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		36 Driver`s side seat adj.	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		37 Navigation	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		46 Central Control Module	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		56 Radio	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		01 Engine electronics	B01,B02,B08,B05,S04,S10,B03,
		02 Transmission Electronics	B01,B02,B08,B05,S04,S10,B03,
		03 Brake Electronics	B01,B02,B08,B05,S04,S10,B03,
		08 AC/Heating electronics	B01,B02,B08,B05,S04,S10,B03,
		09 Electronic Ctrl Electronics	B01,B02,B08,B05,S04,S10,B03,
		0F Radio Tuner-Digital	B01,B02,B08,B05,S04,S10,B03,
		15 Airbags	B01,B02,B08,B05,S04,S10,B03,
		16 Steering Wheel Electronics	B01,B02,B08,B05,S04,S10,B03,
		17 Instrument Cluster	B01,B02,B08,B05,S04,S10,B03,
		18 Aux heating	B01,B02,B08,B05,S04,S10,B03,
		19 Gateway data bus	B01,B02,B08,B05,S04,S10,B03,
		25 Immobilizer	B01,B02,B08,B05,S04,S10,B03,
		36 Driver`s side seat adj.	B01,B02,B08,B05,S04,S10,B03,

Seat **V26.70** Diagnostics List (Note: For reference only)

MODEL	TYPE	SYSTEM	Functions
Leon	1P	37 Navigation	B01,B02,B08,B05,S04,S10,B03,
		3D Special Function	B01,B02,B08,B05,S04,S10,B03,
		42 DRIVER-DOOR ELECT.	B01,B02,B08,B05,S04,S10,B03,
		44 Steering assistance	B01,B02,B08,B05,S04,S10,B03,
		46 Central Control Module	B01,B02,B08,B05,S04,S10,B03,
		47 Soundsystem	B01,B02,B08,B05,S04,S10,B03,
		52 PASSE.-DOOR ELECT.	B01,B02,B08,B05,S04,S10,B03,
		55 Headlight range control	B01,B02,B08,B05,S04,S10,B03,
		56 Radio	B01,B02,B08,B05,S04,S10,B03,
		57 TV-TUNER	B01,B02,B08,B05,S04,S10,B03,
		62 LR-DOOR ELECTRONI.	B01,B02,B08,B05,S04,S10,B03,
		69 TRAILER FUNCTION	B01,B02,B08,B05,S04,S10,B03,
		72 RR-DOOR ELECTRONI.	B01,B02,B08,B05,S04,S10,B03,
		76 Parking aid	B01,B02,B08,B05,S04,S10,B03,
		77 TELEPHONE	B01,B02,B08,B05,S04,S10,B03,
7D Auxiliary Heater	B01,B02,B08,B05,S04,S10,B03,		
		01 Engine electronics	B01,B02,B08,B05,S04,S10,B03,
		02 Transmission Electronics	B01,B02,B08,B05,S04,S10,B03,
		03 Brake Electronics	B01,B02,B08,B05,S04,S10,B03,
		08 AC/Heating electronics	B01,B02,B08,B05,S04,S10,B03,
		09 Electronic Ctrl Electronics	B01,B02,B08,B05,S04,S10,B03,
		0F Radio Tuner-Digital	B01,B02,B08,B05,S04,S10,B03,
		15 Airbags	B01,B02,B08,B05,S04,S10,B03,
		16 Steering Wheel Electronics	B01,B02,B08,B05,S04,S10,B03,
		17 Instrument Cluster	B01,B02,B08,B05,S04,S10,B03,

Seat **V26.70** Diagnostics List (Note: For reference only)

MODEL	TYPE	SYSTEM	Functions
Altea/Toledo	5P	18 Aux heating	B01,B02,B08,B05,S04,S10,B03,
		19 Gateway data bus	B01,B02,B08,B05,S04,S10,B03,
		25 Immobilizer	B01,B02,B08,B05,S04,S10,B03,
		36 Driver`s side seat adj.	B01,B02,B08,B05,S04,S10,B03,
		37 Navigation	B01,B02,B08,B05,S04,S10,B03,
		3D Special Function	B01,B02,B08,B05,S04,S10,B03,
		42 DRIVER-DOOR ELECT.	B01,B02,B08,B05,S04,S10,B03,
		44 Steering assistance	B01,B02,B08,B05,S04,S10,B03,
		46 Central Control Module	B01,B02,B08,B05,S04,S10,B03,
		47 Soundsystem	B01,B02,B08,B05,S04,S10,B03,
		52 PASSE.-DOOR ELECT.	B01,B02,B08,B05,S04,S10,B03,
		55 Headlight range control	B01,B02,B08,B05,S04,S10,B03,
		56 Radio	B01,B02,B08,B05,S04,S10,B03,
		57 TV-TUNER	B01,B02,B08,B05,S04,S10,B03,
		62 LR-DOOR ELECTRONI.	B01,B02,B08,B05,S04,S10,B03,
		69 TRAILER FUNCTION	B01,B02,B08,B05,S04,S10,B03,
		72 RR-DOOR ELECTRONI.	B01,B02,B08,B05,S04,S10,B03,
		76 Parking aid	B01,B02,B08,B05,S04,S10,B03,
		77 TELEPHONE	B01,B02,B08,B05,S04,S10,B03,
7D Auxiliary Heater	B01,B02,B08,B05,S04,S10,B03,		
Arosa	6H	01 Engine electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		02 Transmission Electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		03 Brake Electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		08 AC/Heating electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		15 Airbags	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15

Seat **V26.70** Diagnostics List (Note: For reference only)

MODEL	TYPE	SYSTEM	Functions
Arosa	6T	17 Instrument Cluster	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		19 Gateway data bus	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		25 Immobilizer	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		35 Central Locking	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		56 Radio	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
Ibiza/Cordoba	6K	01 Engine electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		02 Transmission Electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		03 Brake Electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		08 AC/Heating electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		15 Airbags	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		17 Instrument Cluster	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		25 Immobilizer	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		45 Interior Monitoring	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		56 Radio	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
Ibiza/Cordoba	6L	01 Engine electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		02 Transmission Electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		03 Brake Electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		08 AC/Heating electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		09 Electronic Ctrl Electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		15 Airbags	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		17 Instrument Cluster	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		19 Gateway data bus	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		25 Immobilizer	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		37 Navigation	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		44 Steering assistance	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15

Seat **V26.70** Diagnostics List (Note:For reference only)

MODEL	TYPE	SYSTEM	Functions
		46 Central Control Module	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		55 Headlight range control	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		56 Radio	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
Ibiza	6J	01 Engine electronics	B01,B02,B08,B05,S04,S10,B03,
		02 Transmission Electronics	B01,B02,B08,B05,S04,S10,B03,
		03 Brake Electronics	B01,B02,B08,B05,S04,S10,B03,
		08 AC/Heating electronics	B01,B02,B08,B05,S04,S10,B03,
		09 Electronic Ctrl Electronics	B01,B02,B08,B05,S04,S10,B03,
		10 Parking Assist System 2	B01,B02,B08,B05,S04,S10,B03,
		15 Airbags	B01,B02,B08,B05,S04,S10,B03,
		17 Instrument Cluster	B01,B02,B08,B05,S04,S10,B03,
		19 Gateway data bus	B01,B02,B08,B05,S04,S10,B03,
		25 Immobilizer	B01,B02,B08,B05,S04,S10,B03,
		37 Navigation	B01,B02,B08,B05,S04,S10,B03,
		3E Media player position 4	B01,B02,B08,B05,S04,S10,B03,
		44 Steering assistance	B01,B02,B08,B05,S04,S10,B03,
		55 Headlight range control	B01,B02,B08,B05,S04,S10,B03,
		56 Radio	B01,B02,B08,B05,S04,S10,B03,
		69 TRAILER FUNCTION	B01,B02,B08,B05,S04,S10,B03,
77 TELEPHONE	B01,B02,B08,B05,S04,S10,B03,		
		25 Immobilizer	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		01 Engine electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		02 Transmission Electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		03 Brake Electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		08 AC/Heating electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15

Seat **V26.70** Diagnostics List (Note: For reference only)

MODEL	TYPE	SYSTEM	Functions
Alhambra I	7M	09 Electronic Ctrl Electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		15 Airbags	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		16 Steering Wheel Electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		17 Instrument Cluster	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		18 Aux heating	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		19 Gateway data bus	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		22 4WD Electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		29 Left light control	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		36 Driver`s side seat adj.	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		37 Navigation	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		39 Right light control	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		45 Interior Monitoring	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		46 Central Control Module	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		55 Headlight range control	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		56 Radio	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
76 Parking aid	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15		

NOTE:

B01:01 Control Unit Info

B02:02 Read Fault Codes

B08:08 Measuring Blocks (Live Data)

B05:05 Clear Fault Codes

BIS:identification services

B15:15 Readiness

B09:09 Single Reading

Seat **V26.70** Diagnostics List (Note:For reference only)

MODEL	TYPE	SYSTEM	Functions
-------	------	--------	-----------

B03:03 Output Tests

S04:04 Basic Settings

S10:10 Adaptation

S07:07 Code Module

S11L:11 Login

SCA:Chassis Number adjustment

S11C:11 code module

S16:16 Access permission

SLC:Long Code

(*):Tested;

(?):Manual on website(www.x431.com)

NOTE:The final interpretation of the products belongs to LAUNCH TECH CO.,LTD